





TWENTY-FIVE SNAP IN MANUAL


CONSTANT CURRENT LAMPS MUST BE INSTALLED IN SERIAL CONNECTION

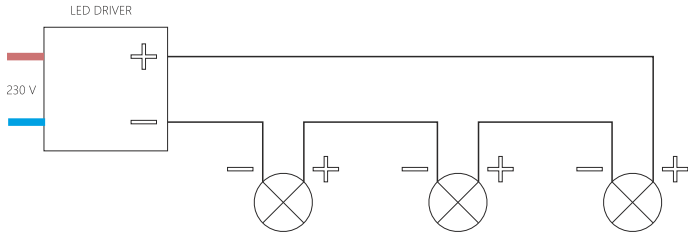


TWENTY-FIVE SNAP IN 350 mA

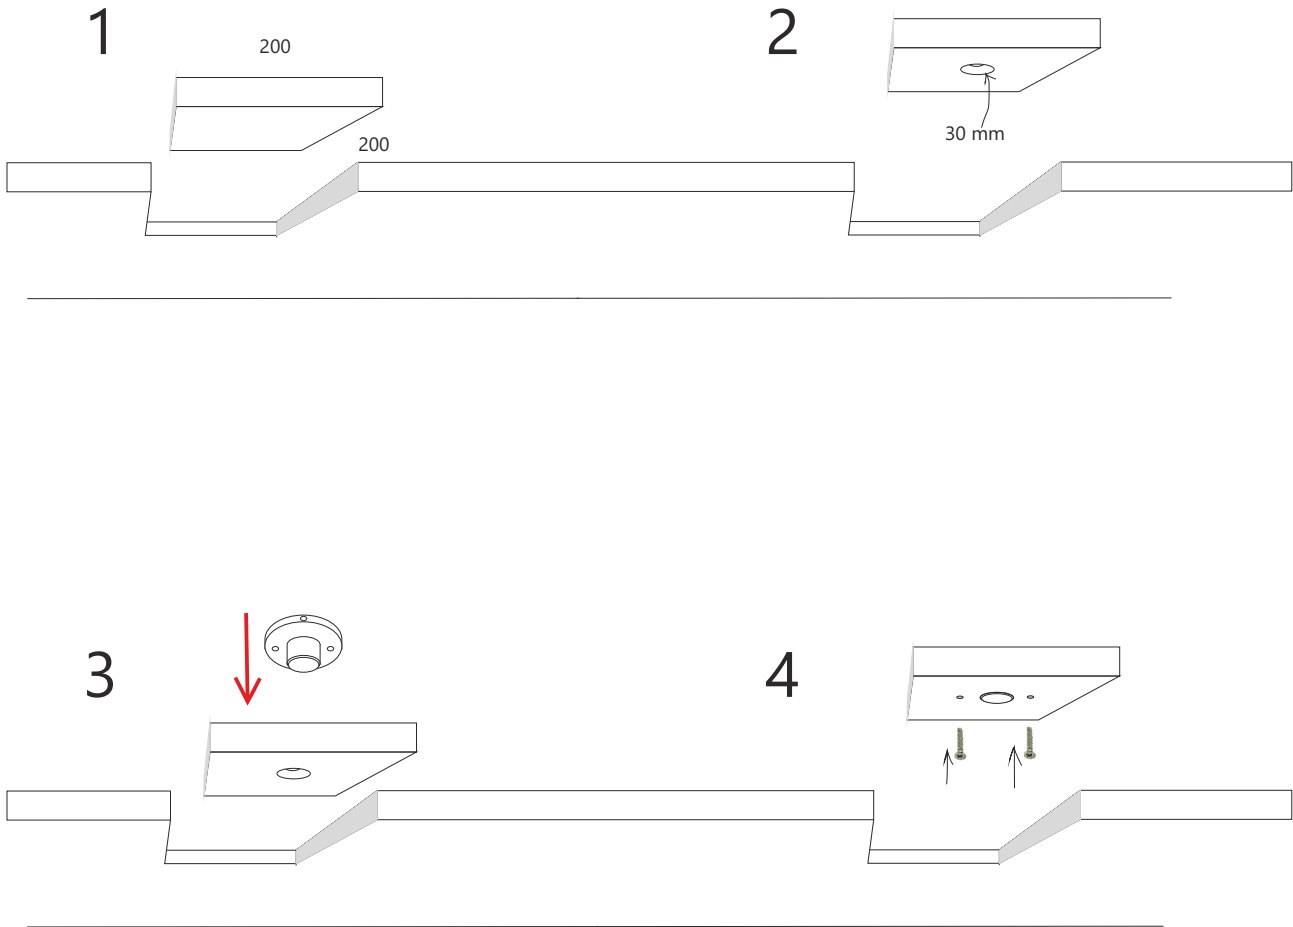

5

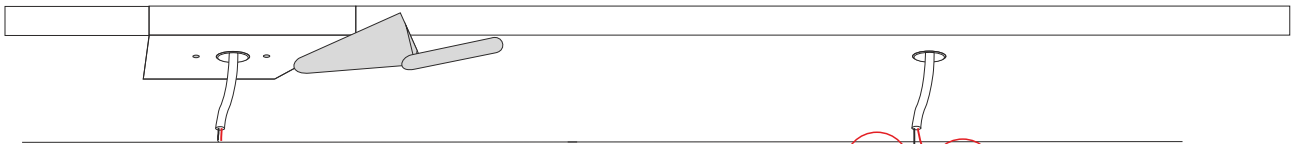

6

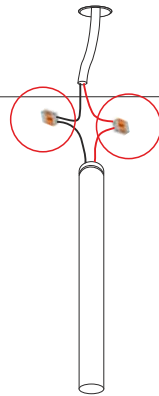

7

