




COPPER LAMPS MANUAL


CONSTANT CURRENT LAMPS MUST BE INSTALLED IN SERIAL CONNECTION

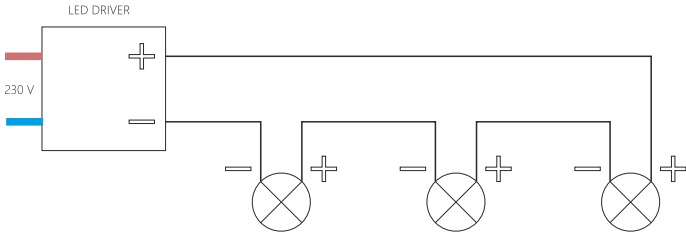

COPPER LAMPS 350 mA LAMP WITH CEILING ROSETTE 50mm


1

fixing to ceiling

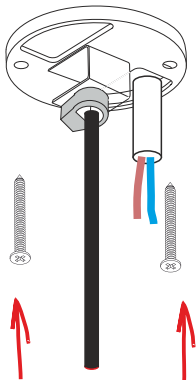


2

Set lamp hight

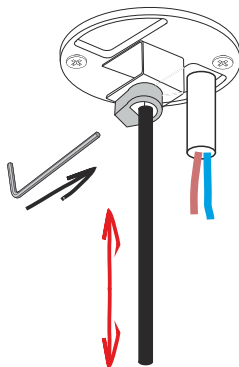


3

connect cable

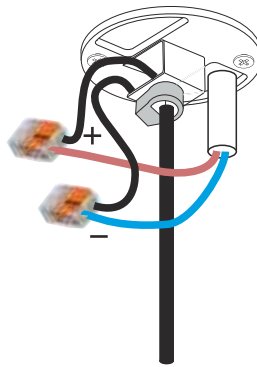


4

fixing rosette cover

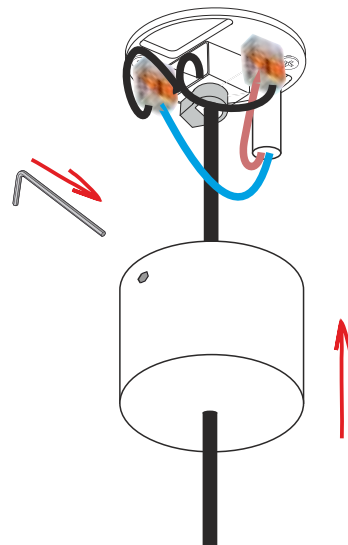

COPPER LAMPS 350 mA LAMP WITH FALSE CEILING ROSETTE

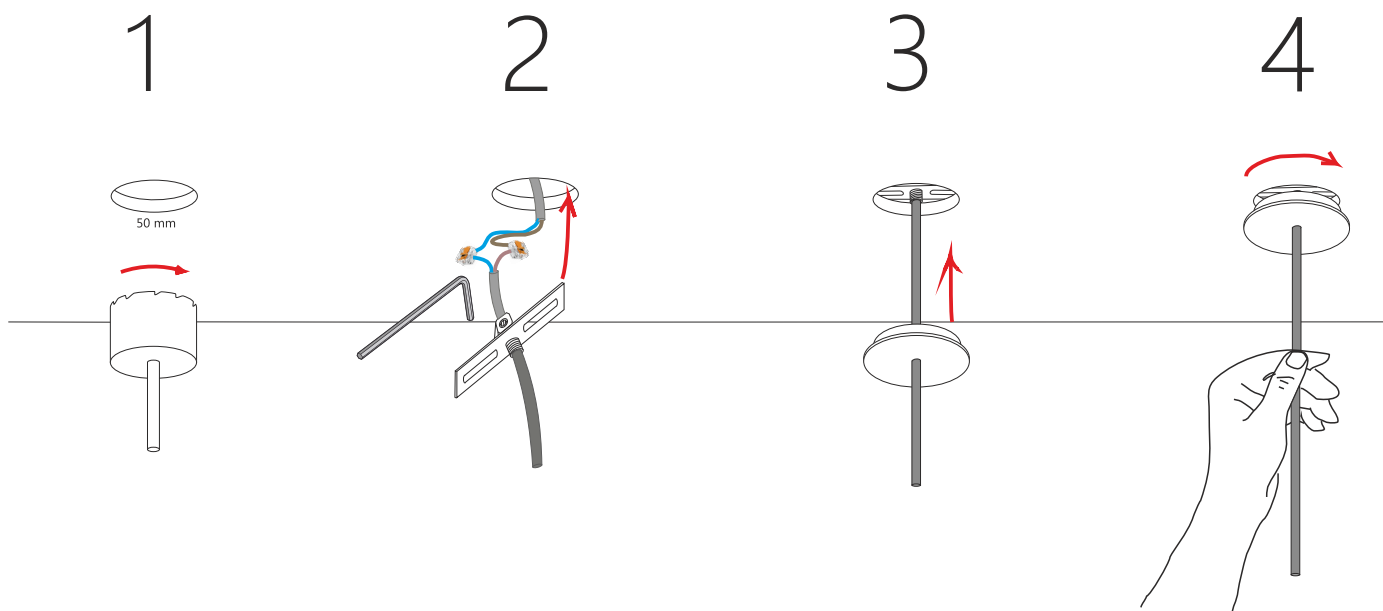

COPPER LAMPS 220V LAMP WITH INTEGRATED LED DRIVER

